


1/8

FIG. 1

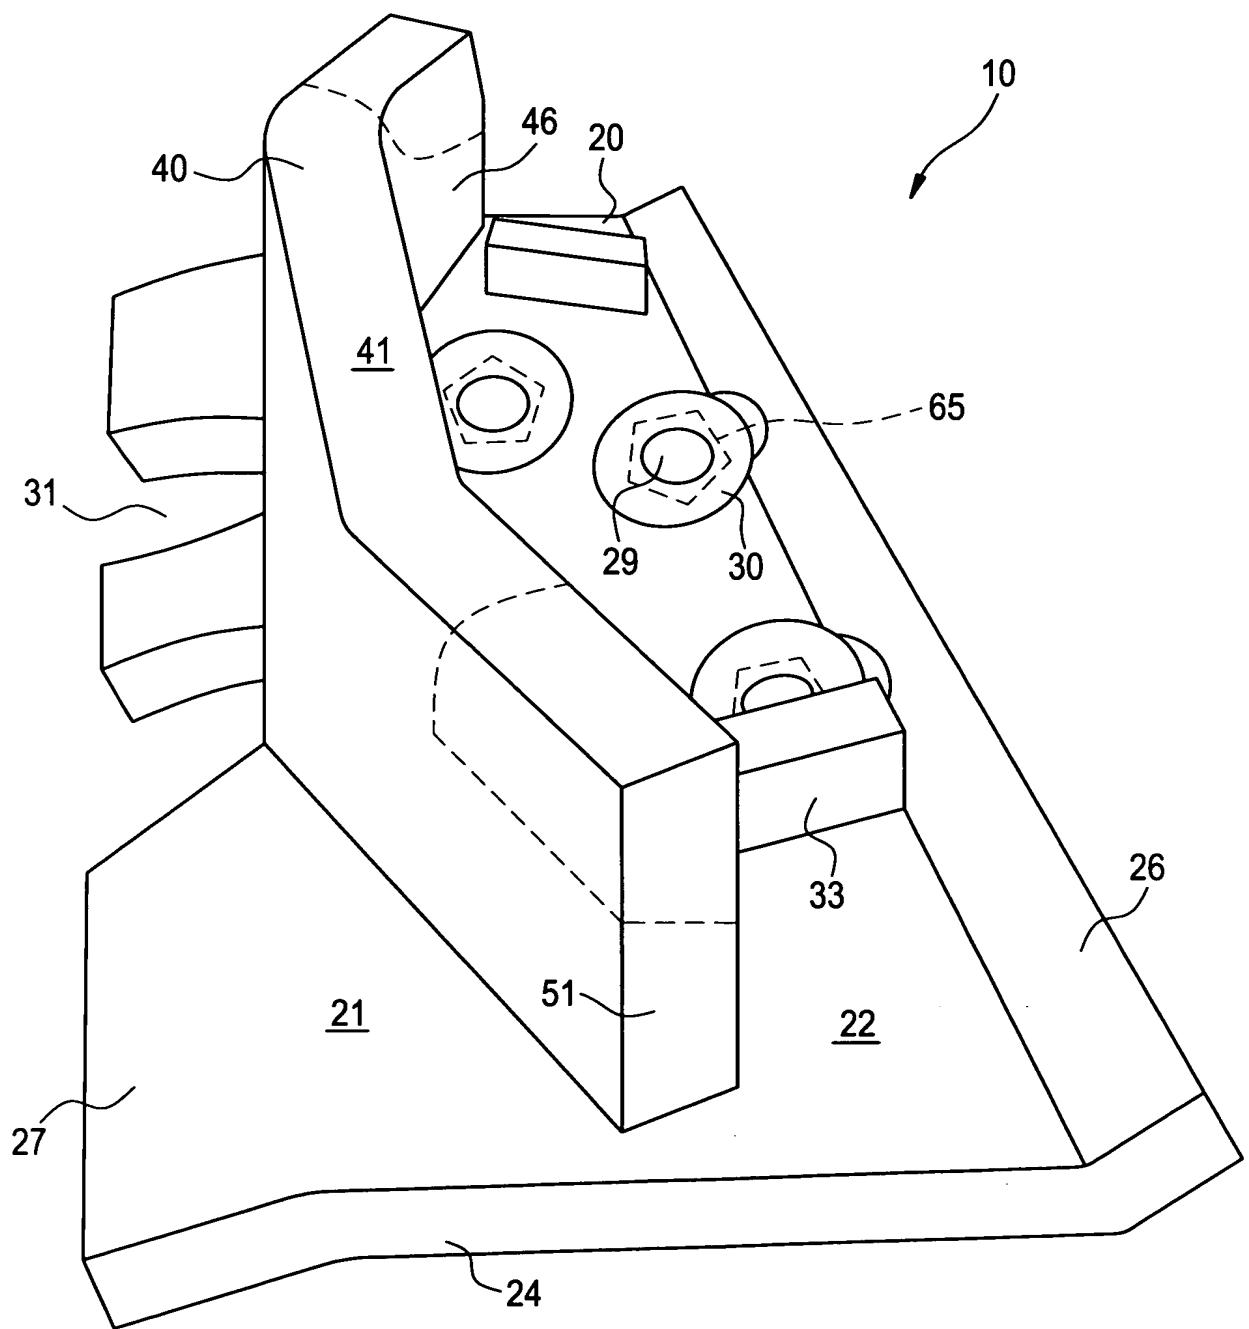

2/8

FIG. 2

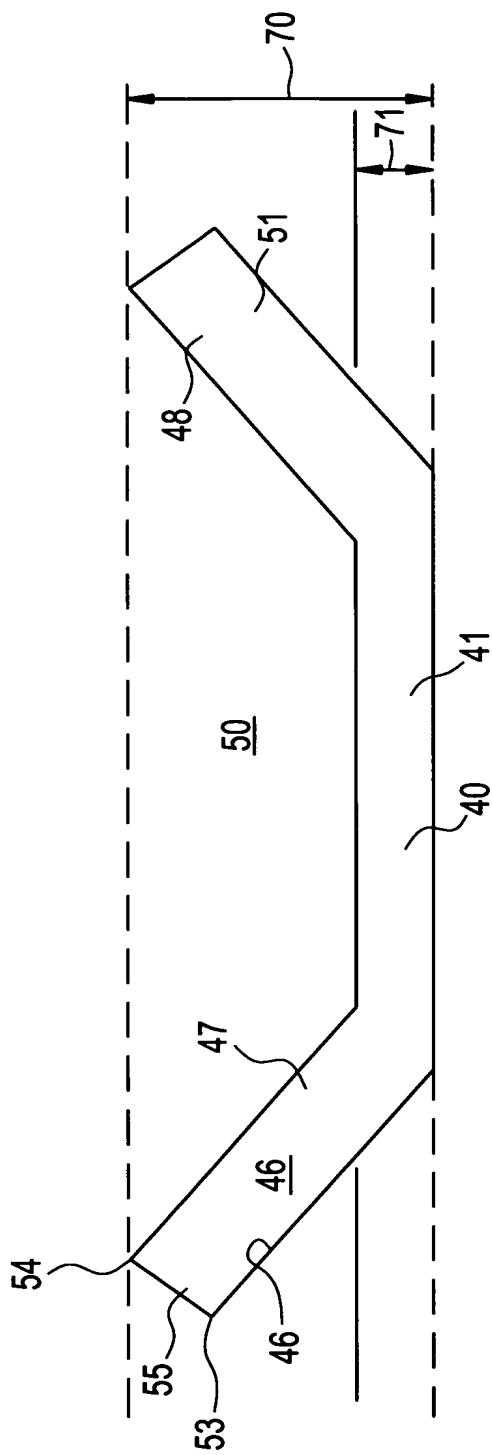


FIG. 3B

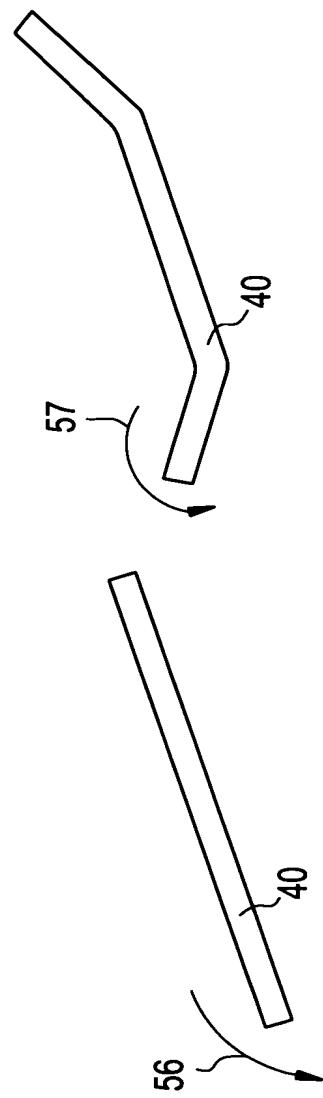


FIG. 3A

3/8

FIG. 4

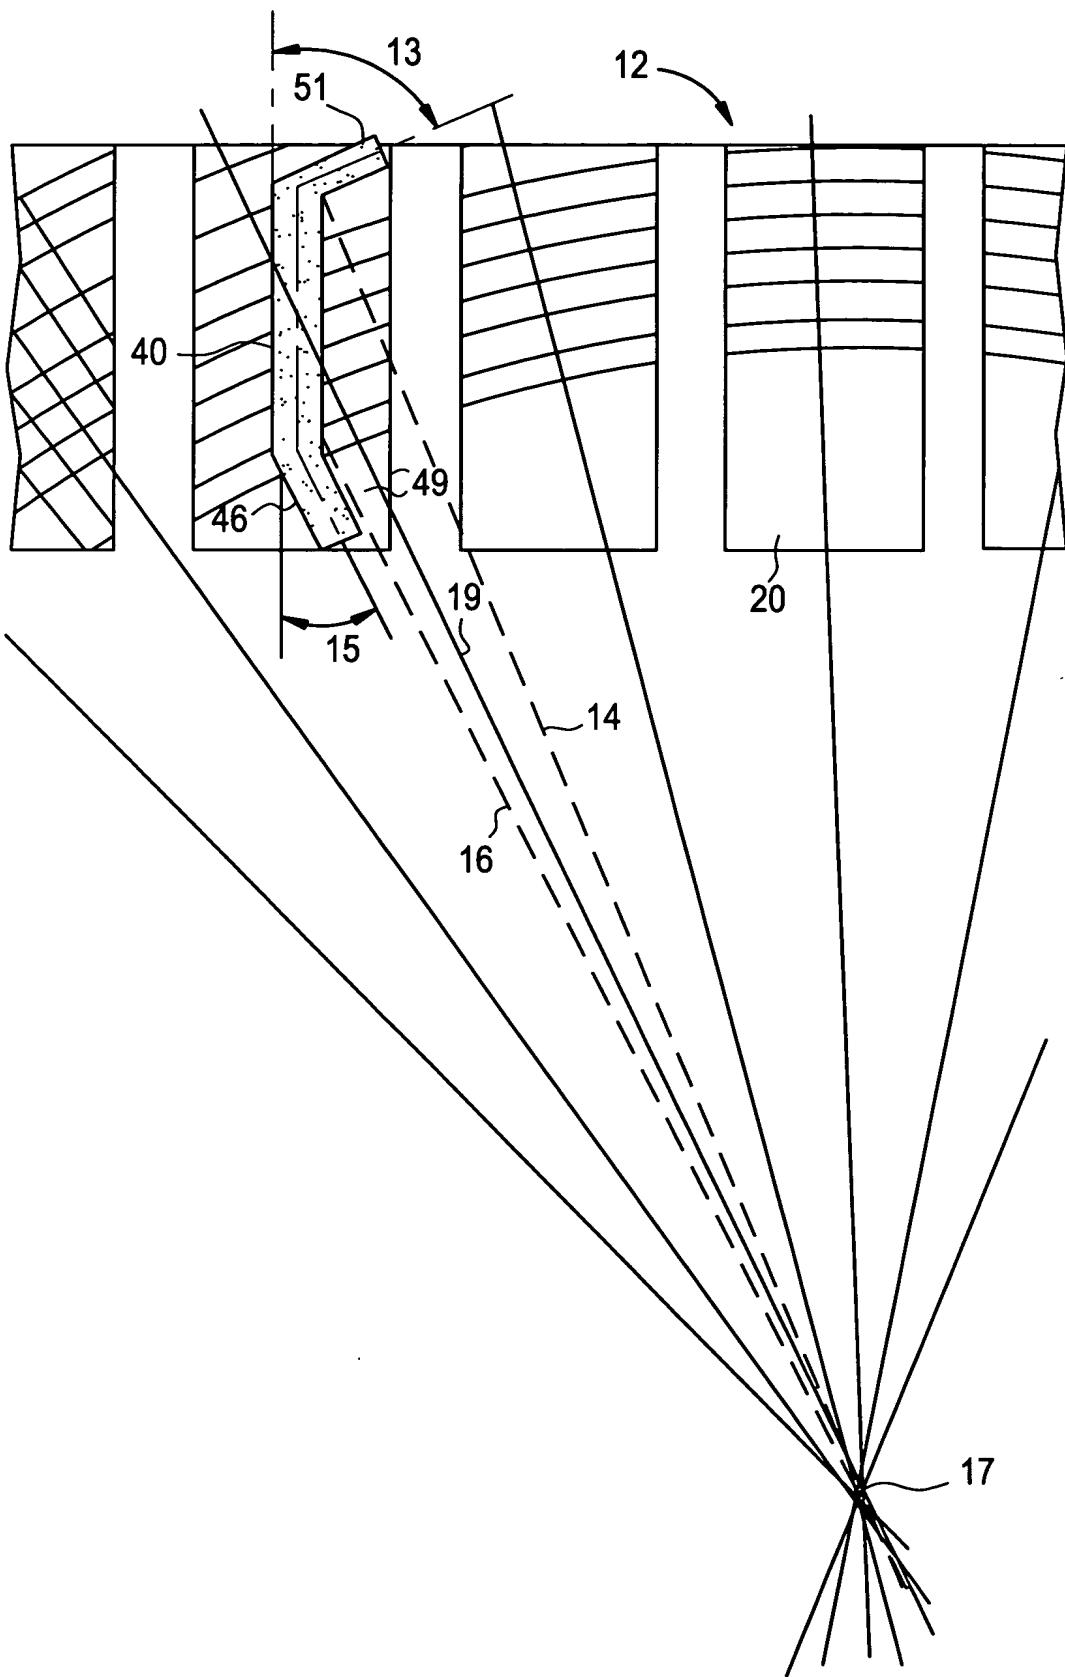


FIG. 5

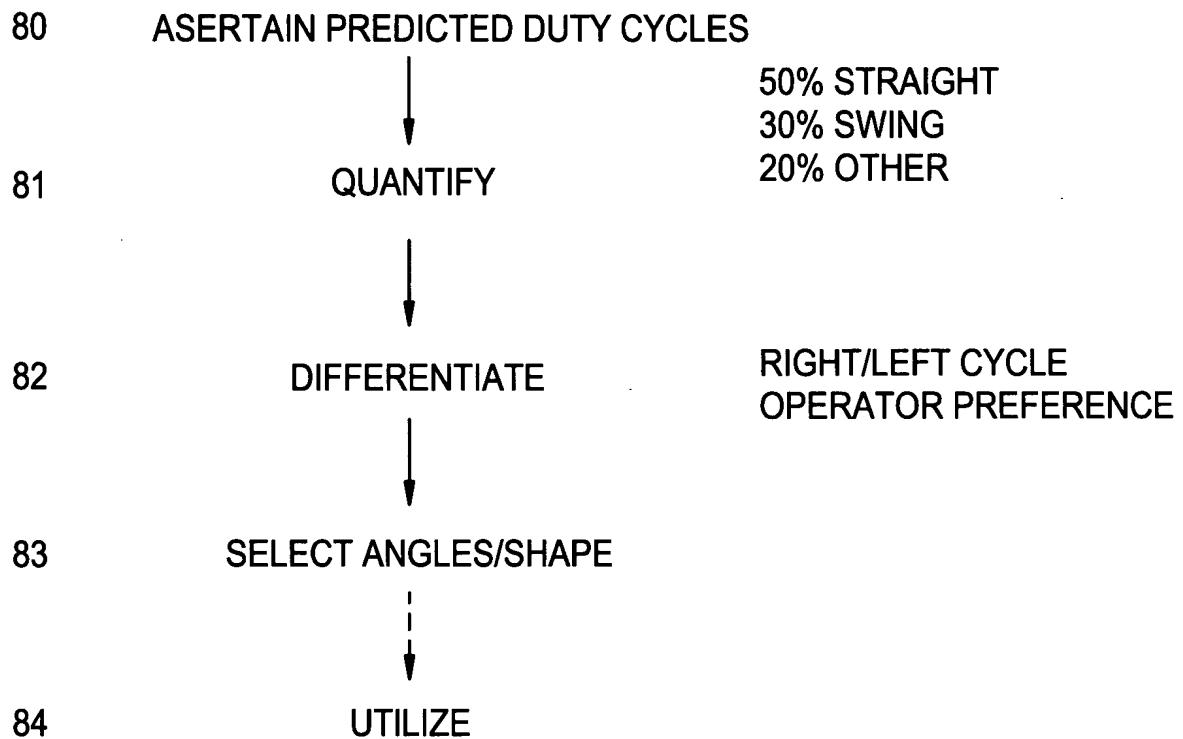
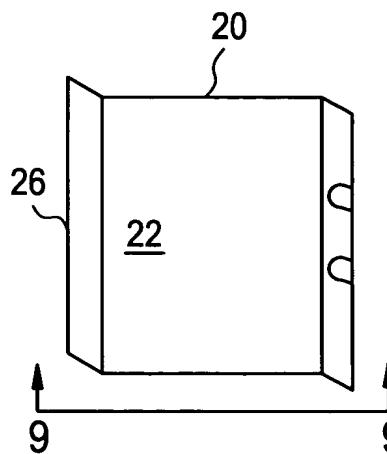
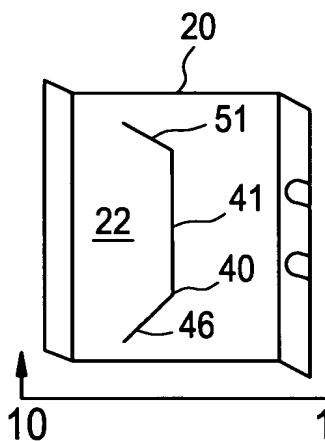
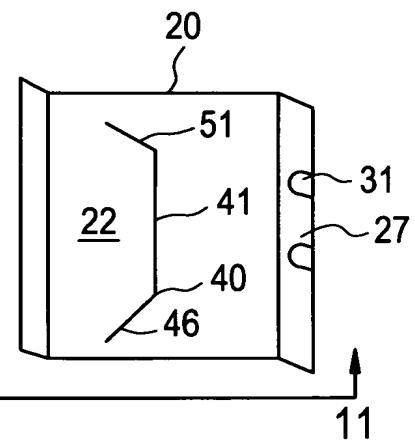
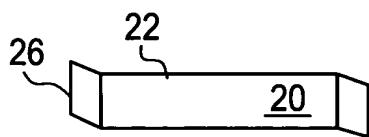
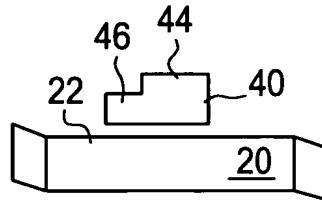
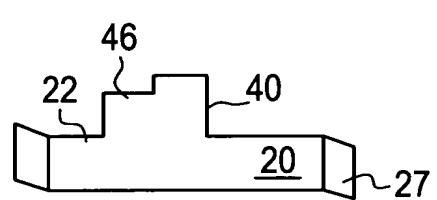
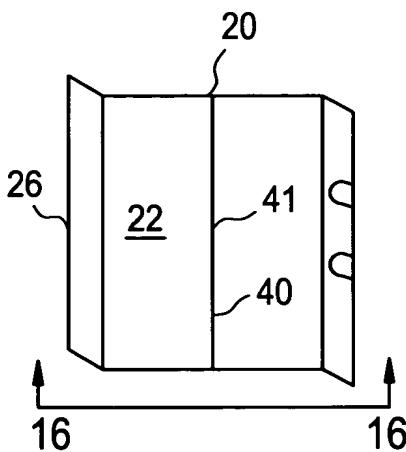
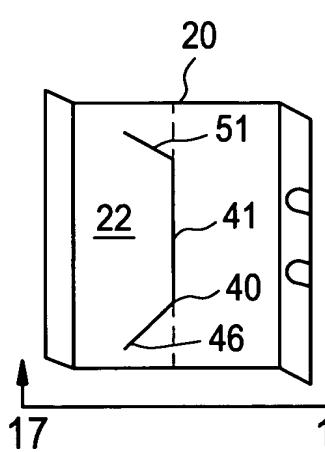
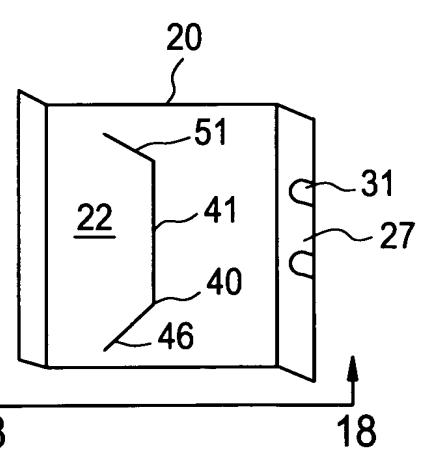
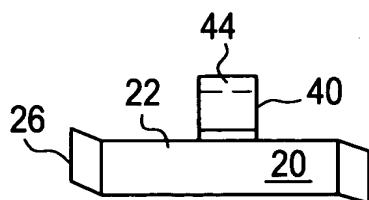
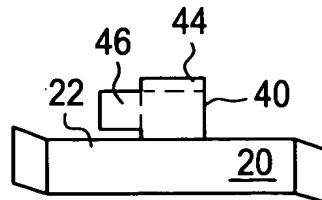
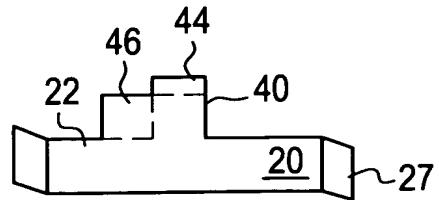
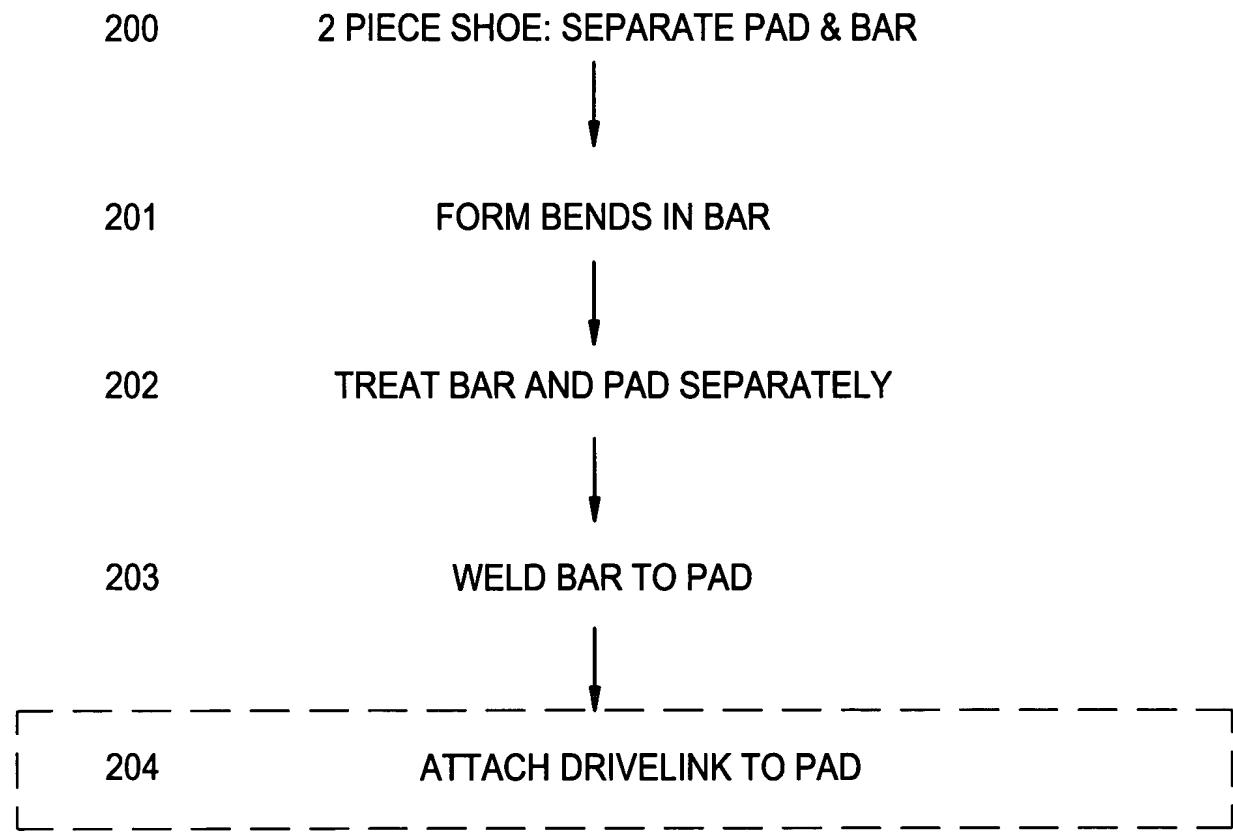


FIG. 6**5/8
FIG. 7****FIG. 8****FIG. 9****FIG. 10****FIG. 11****FIG. 12****FIG. 13****FIG. 14****FIG. 16****FIG. 17****FIG. 18**

6/8

FIG. 12

7/8


FIG. 19

- 100 INTEGRAL SHOE WITH PAD AND BAR
- 101 SHEAR END OF BAR FROM PAD
- 102 FORM BEND AT SHEARED END
- 103 WELD SHEARED BENT END TO PAD
- 104 TREAT SHOE
- 105 ATTACH DRIVELINK TO PAD

09/967,277

8/8

FIG. 20

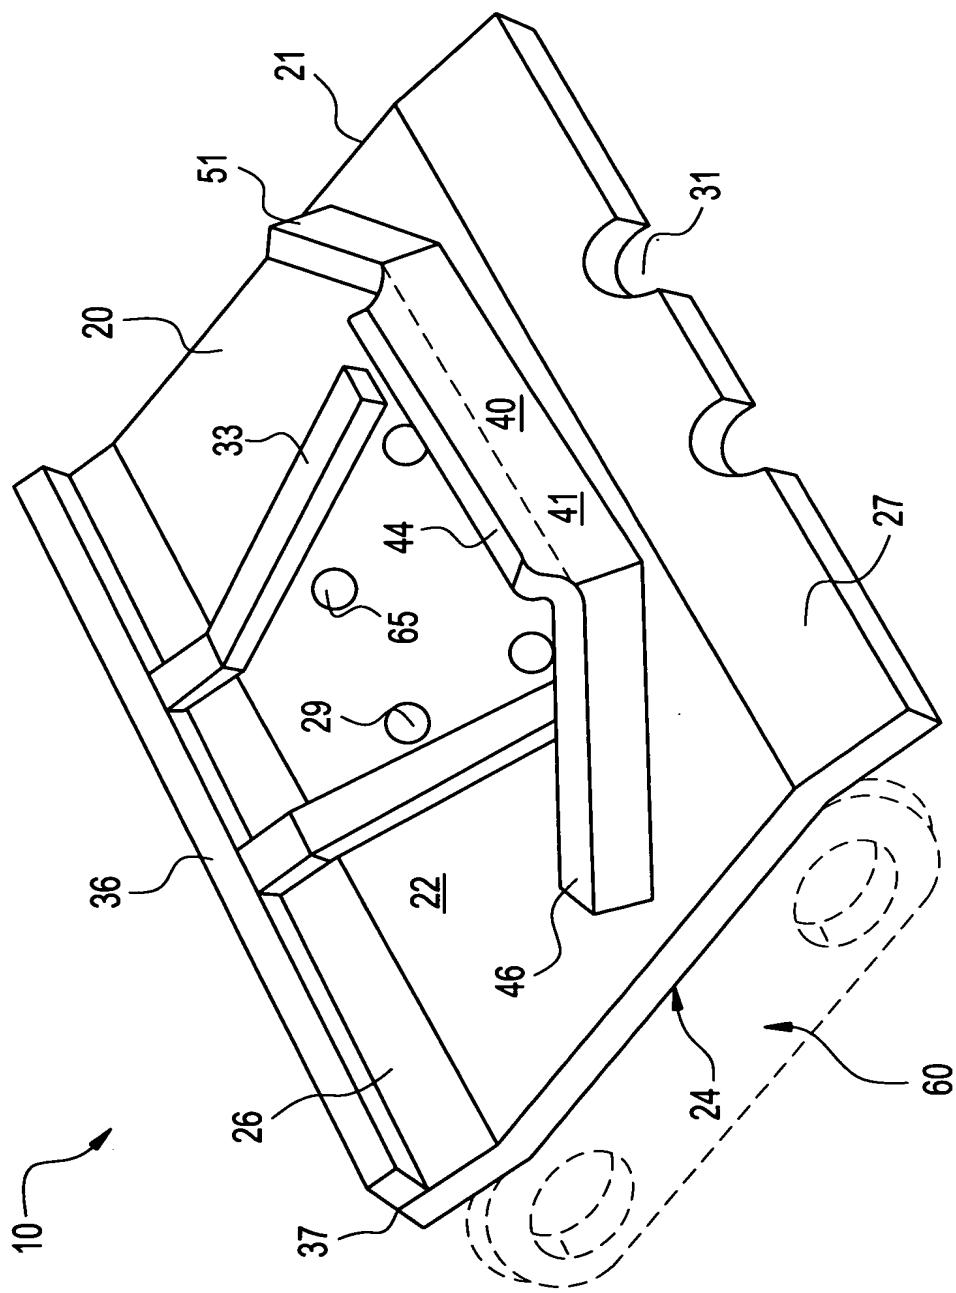

BEST AVAILABLE COPY